



Sony VAIO VPCF 132FX Media Board Replacement

This will guide you in replacing the Media Board of a Sony Vaio VPCF 132FX

Written By: trickster



INTRODUCTION

This will guide you in replacing the Media Board of a Sony Vaio VPCF 132FX

Step 1 — Battery



- Remove all wires then flip the laptop

Step 2



- Remove the battery

Step 3 — Media Board




- Remove the screws and flip it back.

Step 4






- Lift the screen and slide your nail or any flat plastic to the side of the cover to unclip it.
- Slide from the sides towards the center.

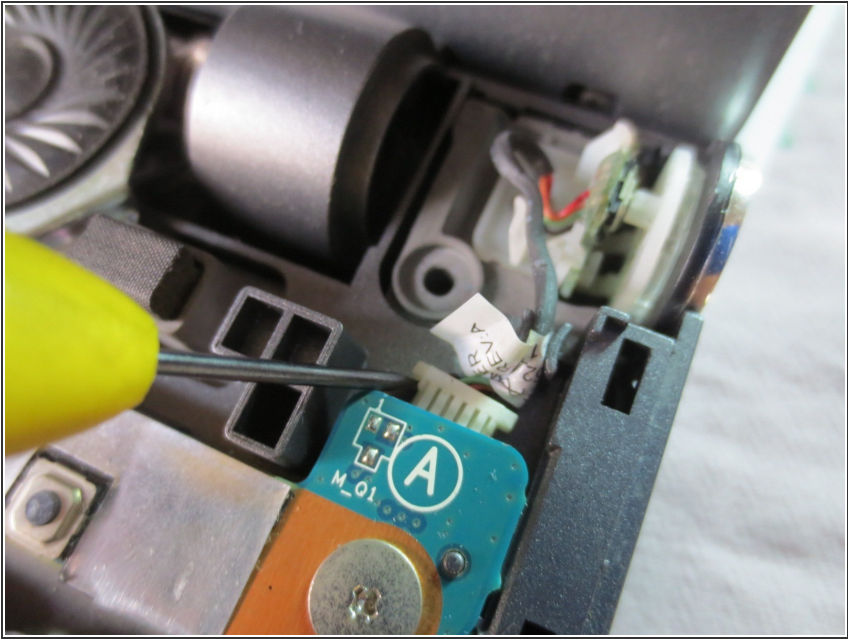

- Gently remove the wire of the Power Button.

Step 6

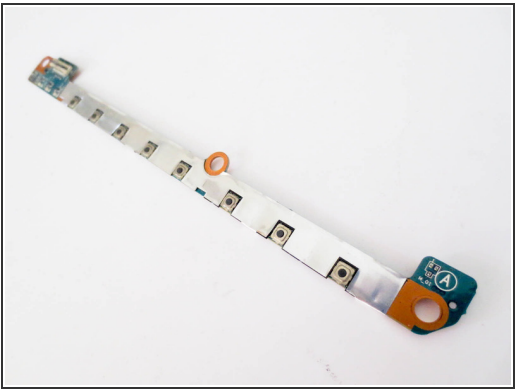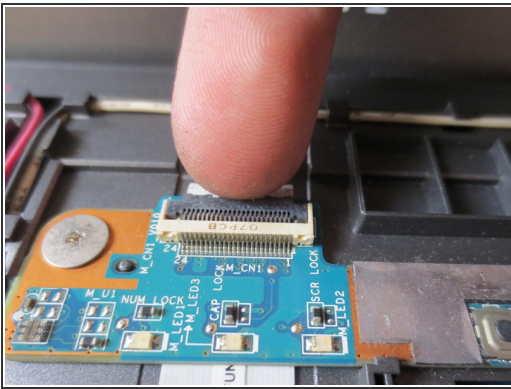

- Unlock the Lock.
- Unscrew the 3 Flat screws and remove the Media Board.
-  You may skip this step if replacing the Power Button.

To reassemble your device, follow these instructions in reverse order.